

### TRANSMITTER SWITCH SETTINGS

switch #	1 2 3	4 5 6	7 8 9	10 11 12
up or down				
result				

UP	UP	UP	7
UP	UP	DOWN	6
UP	DOWN	UP	5
UP	DOWN	DOWN	4
DOWN	UP	UP	3
DOWN	UP	DOWN	2
DOWN	DOWN	UP	1
DOWN	DOWN	DOWN	0

### G - SERIES KEYPAD



Open cover on keypad just enough to press [#] & [8] at the same time. While pressing these two buttons, raise the cover all the way (this erases the old code). Release the buttons.

Close keypad cover fully. Open keypad cover fully.

Press and release [3] then [5] then [7] then [#] (the light should be blinking about once a second).

Enter your new PIN number and press [\*] red light will turn off.

Close keypad cover fully.

Slide keypad cover open fully and enter the PIN number and press [\*] to operate the door.

THIS UNIT IS NO LONGER SUPPORTED BY THE FACTORY- SLIDE UP KEYPAD COVER AND BATTERY COVERS ARE NOT AVAILABLE.